


## Wireless Conferencing via DGL200

Wireless Conference function enables a laptop to access the USB conference peripherals (such as a USB camera, a USB speakerphone, etc.) attached to the switcher wirelessly through a Dongle.

Here is how to use this feature:

1. Pair between the device with the Dongle.  
Connect the Dongle to the PAIRING port to pair two devices. Once pairing is complete, remove the Dongle from the switcher.
2. Insert the dongle into the laptop. A pop-up will appear in the bottom right corner of the desktop. Click it, and in the next pop-up, select "Run PureLink-Share-Setup.vbs" to install the application.
3. The installation process will run in the background and the application will start automatically after the installation is successful.
4. Connect the Dongle to the laptop's USB-C port. The Dongle will be ready to transmit and receive signals in a few seconds.  
Note: Please make sure the USB-C port of the laptop supports audio and video output.
5. Press the Wireless Conference button on the Dongle to connect between the laptop and the USB devices wirelessly.

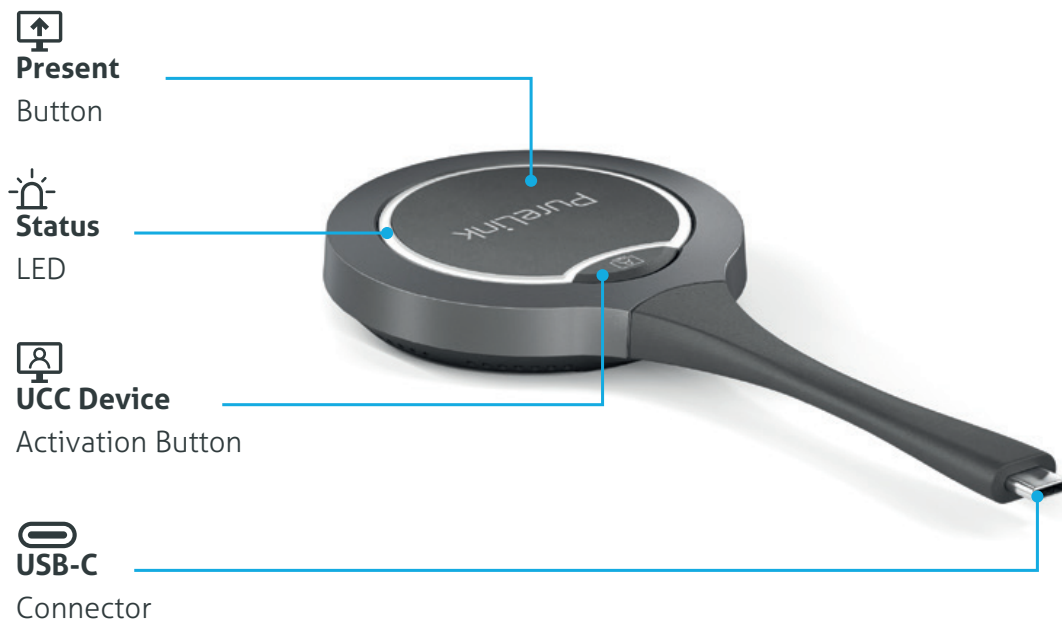

Now you can access the USB camera and the USB speakerphone through the laptop as you wish.

Note: Please make sure the USB-C port of the laptop supports audio and video output.